

Outdoor Shades USA

PATIO SHADE MEASURING



PLEASE NOTE: Sending us a picture of the area you are measuring is highly recommended!

Thank you for your interest in Outdoor Shades USA Exterior Screens & Shades. Whether you are an experienced installer or this is your first installation, it's suggested to read these measurement instructions carefully before ordering.

- Take your time!
- Double Check every measurement!
- Send us a picture, so we can look for things that might cause mistakes in measuring and ordering.

Tools Needed




Tape Measure



6 Foot Level



Pencil

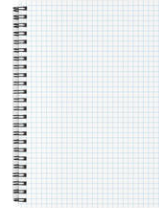

Paper

Optional Tools



Tape Measure

Measuring Inside Mount

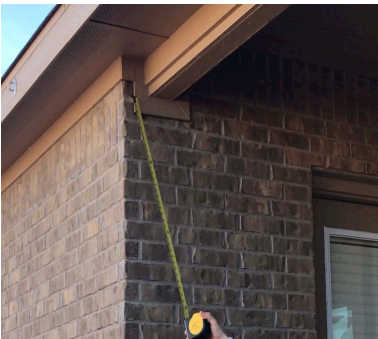


FIG 1

1) The first step is to determine the mounting location for your Outdoor Shade. The most common patio location is under the Soffit and against the outside of the support beam.

2) Next determine if there are any obstructions. In Fig1 you can see there is trim on top of the brick that will need to be removed. Make sure to measure from the brick to brick. (mounting on top of the trim is possible but will leave bigger gaps behind the tracks or fabric)

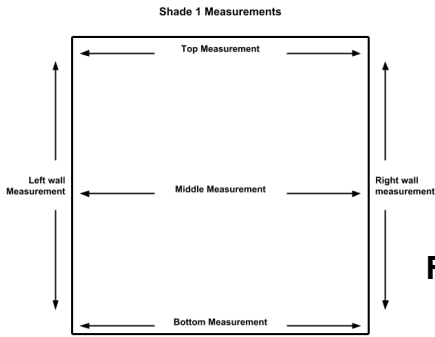


FIG 2

3) We recommend making a drawing of your space to record measurements and out of level details.(FIG 2)



FIG 3

4) Check the level of walls and columns and adjust your drawing to match. (FIG 3)

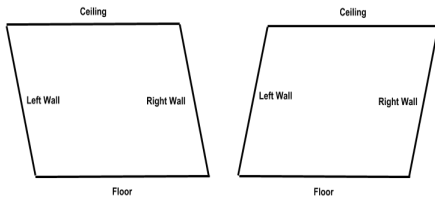


FIG 4

5) If your space is out of level and in the direction shown in (FIG 4) then we recommend calling or emailing us and we can walk you through how to correctly measure your space.

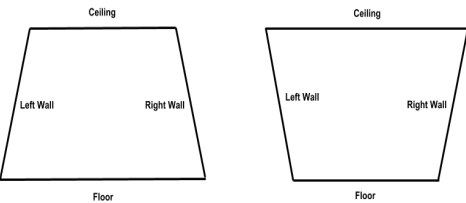


FIG 5



FIG 6

6) If your space is level or resembles (FIG 5) take 3 measurements, Top(FIG 6), Middle(FIG7), Bottom(FIG8) and use the smallest one when ordering.



FIG 7



FIG 8